





## Drive Master 3.5 installation manual IDE/Serial ATA USB 2.0 model

\* Please set "master" mode on your hard disk drive to be installed in this product


- 1) Please take out the panel inside from the socket

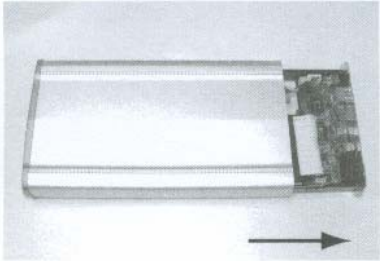


- 2) Connect IDE cable and power cable or Serial ATA cable to the panel. Make sure they are securely connected, and connect HDD to the product. Screw to hold the HDD to the product frame.

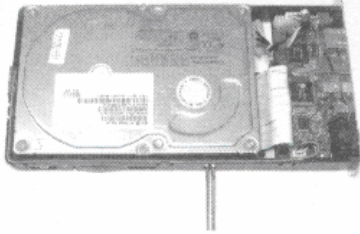

- 3) Please insert the panel with HDD into the frame. Please make sure the switch button is active by pushing. If it is not working by pushing the button, the panel could be slipped off the proper position, so please retry insertion.

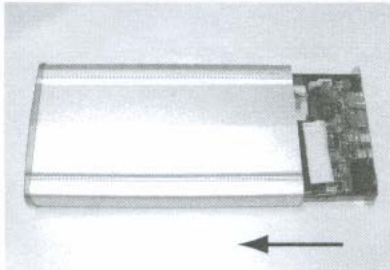

- 4) Screw and hold secure the frame. Complete installation by connecting USB cable and AC adapter cable.

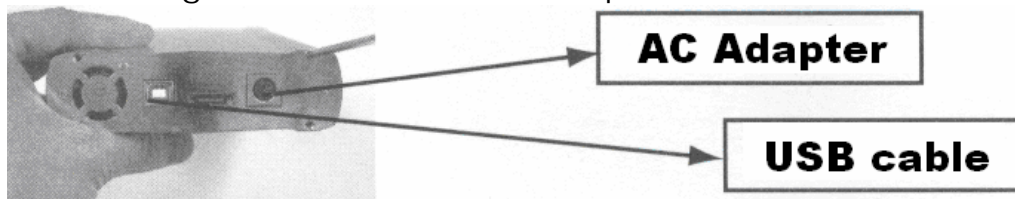

- 5) CD driver installation is not required for Windows Me/2000/XP